


Emergency Extraction Information for Aircraft NL51JC



Aircraft Type: P-51D
Registration: NL51JC
Pilot Name:
Emergency Contact Name:
Emergency Contact Number:
Date:

Electrical/Ignition System NL51JC

Battery Master
and all electrical
switches; down
is off.

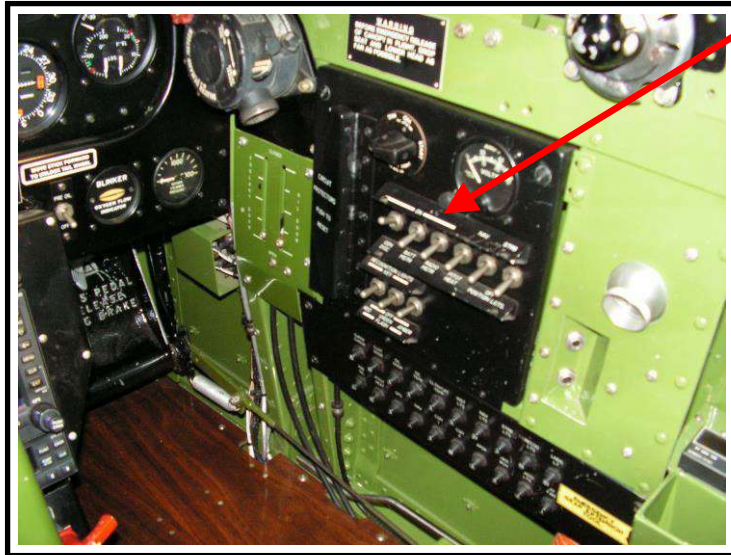

Lift this lever to
release belts.

Harnesses NL51JC



Aircraft Type: P-51D
Registration: NL51JC
Pilot Name:
Emergency Contact Name:
Emergency Contact Number:
Date:

**Ejection System
NL51JC**

N/A


**Hazmat
NL51JC**

N/A

Aircraft Type: P-51D
Registration: NL51JC
Pilot Name:
Emergency Contact Name:
Emergency Contact Number:
Date:


Rotate handle to
"FUS. TANK"
for off position.

Fuel System NL51JC

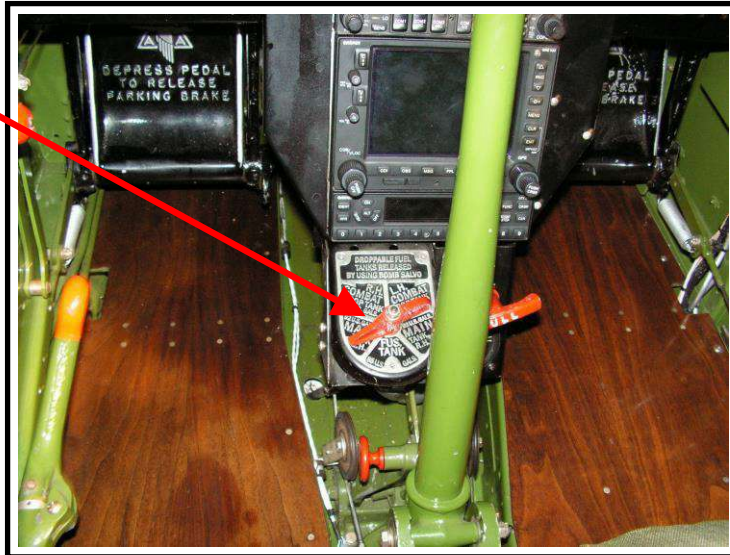

Push forward
end and pull aft
end of lever to
release canopy;
then lift canopy
off.

Canopy System NL51JC

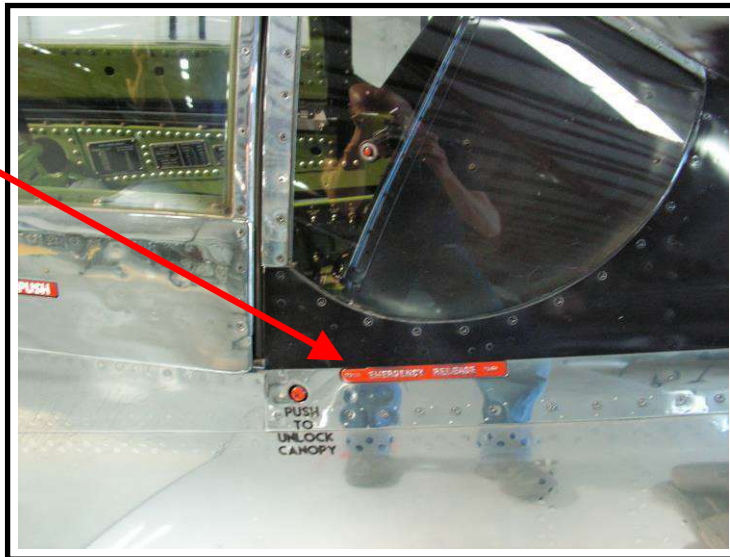

Aircraft Type: P-51D
Registration: NL51JC
Pilot Name:
Emergency Contact Name:
Emergency Contact Number:
Date: